
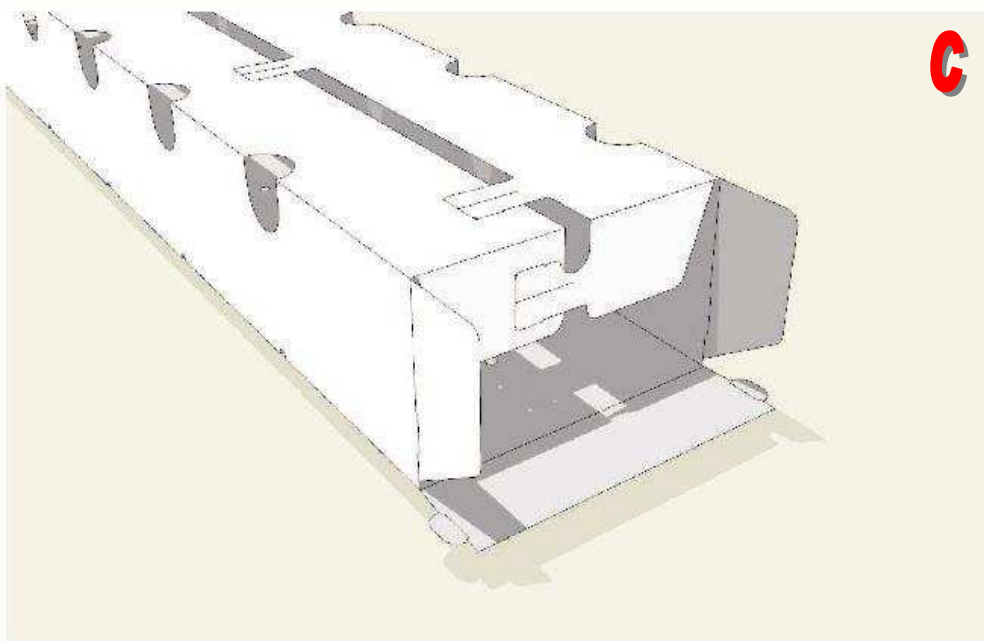


ASSEMBLY OF THE PP CONTAINER & DRAINAGE SYSTEM


ASSEMBLY OF THE PP CONTAINER

The polypropylene container is easy to assemble: just fold at the crease (B) and over lace the tongues(C).

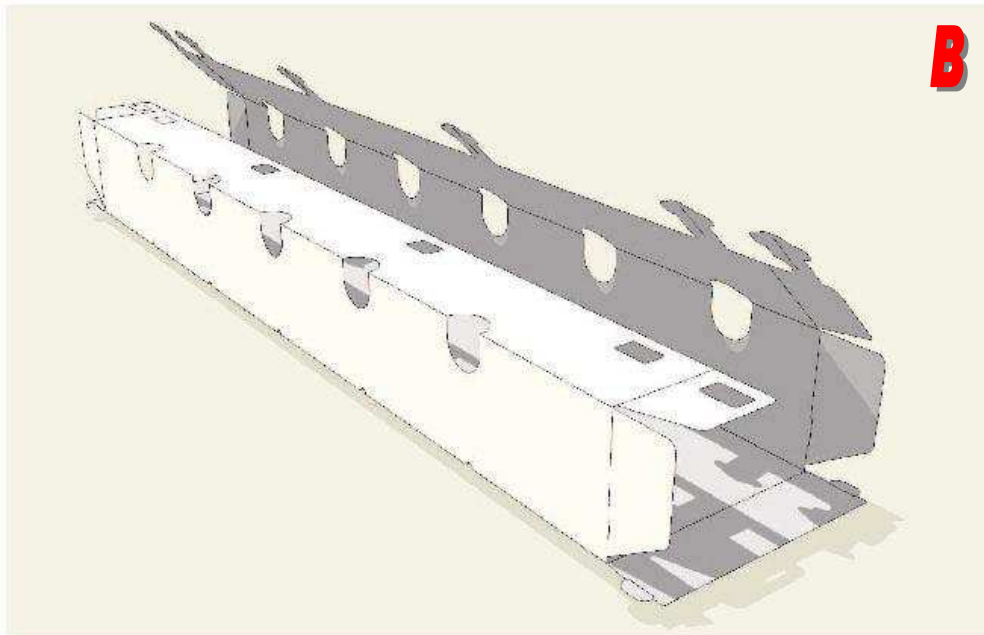


THE DRAINAGE SYSTEM FOR THE PVC 210 GUTTER

The drainage outlet must be attached to the end of the PVC gutter

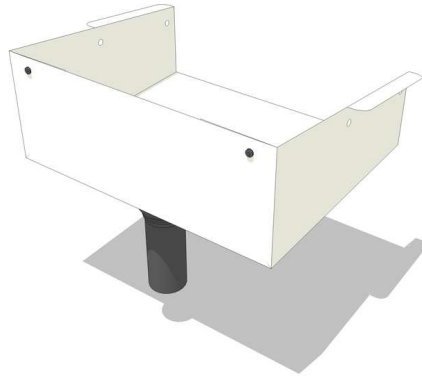


Fold along the creases (B) and add the rivets(C).


A

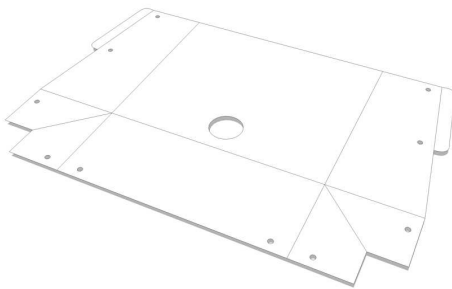

B

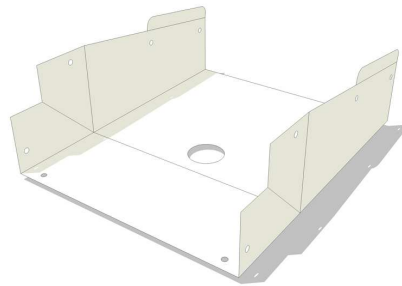

C

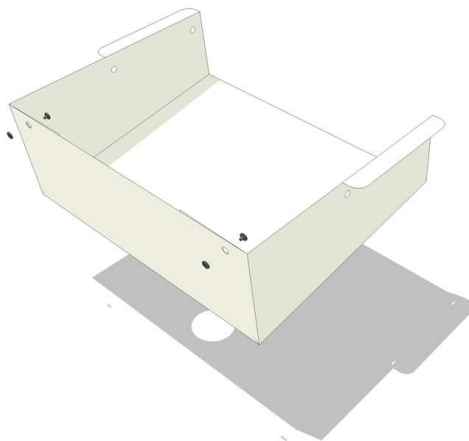


Assembly of the **1 1/4" outlet drainage unit (D)**.

D




Insert and close the plastic drainage unit (E & F).


E

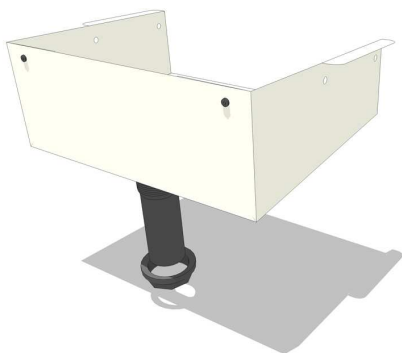

F

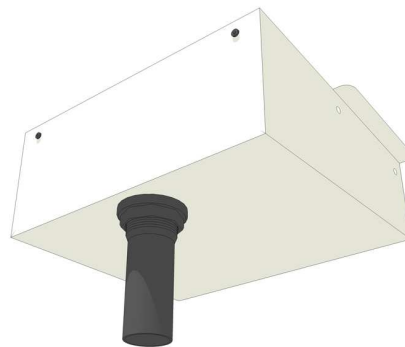

Drill holes in the PVC gutter in the appropriate location (A & B), and join the unit to the PVC gutter using plastic rivets or screws(C).

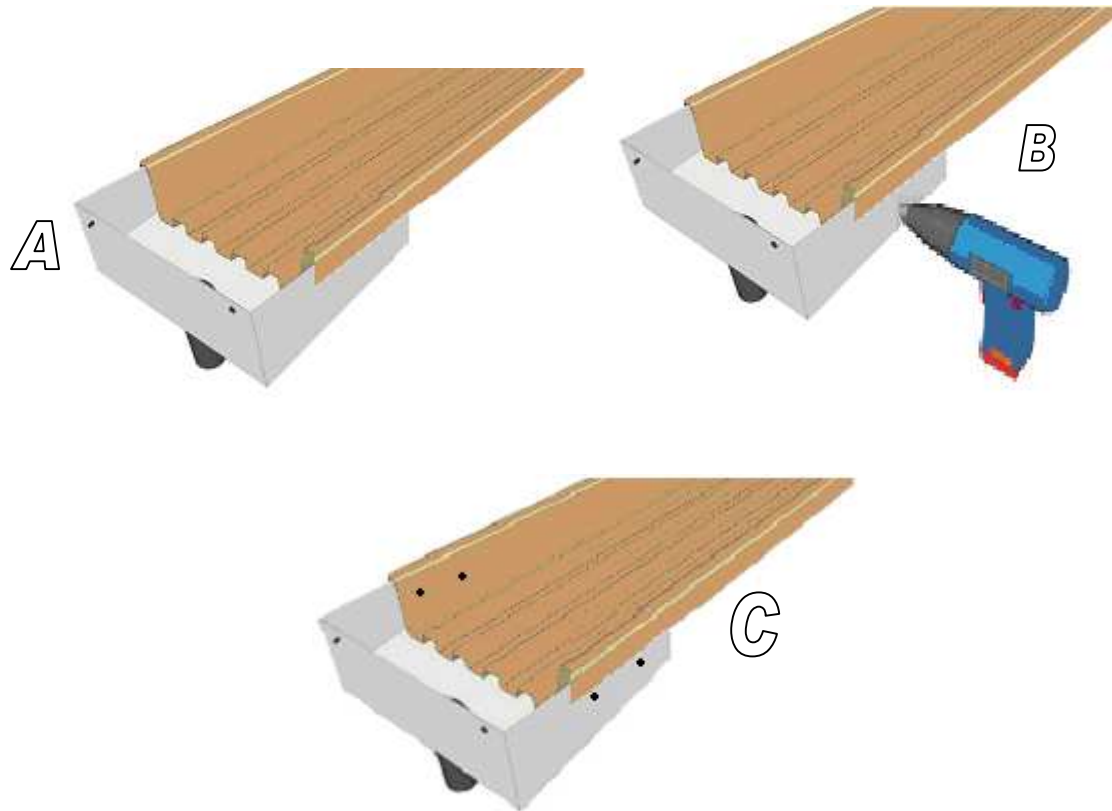

ORGANIC GROWING MEDIUM FILLED TROUGH IN A PVC 210 DRAINAGE GUTTER



1

2

3

4

5

6



MAPAL PLASTICS
AGRICULTURAL PRODUCTS DIVISION
MEVO HAMMA, 12934 ISRAEL

Tel: +972-4-6764784/ 555 / 754

Cell: +972-52-8695370 / 355

Fax: +972-4-6764756

rubzvi@mapalplastics.com

sandra@mapalplastics.com

mapal@mapalplastics.com

web: <http://www.mapalplastics.com/agr.html>