




## **TROUGH ENDINGS & RIVET PLACING**

1. CREASE & FOLD THE  
CORNERS OF THE TROUGH



2. FOLD AT THE CREASES

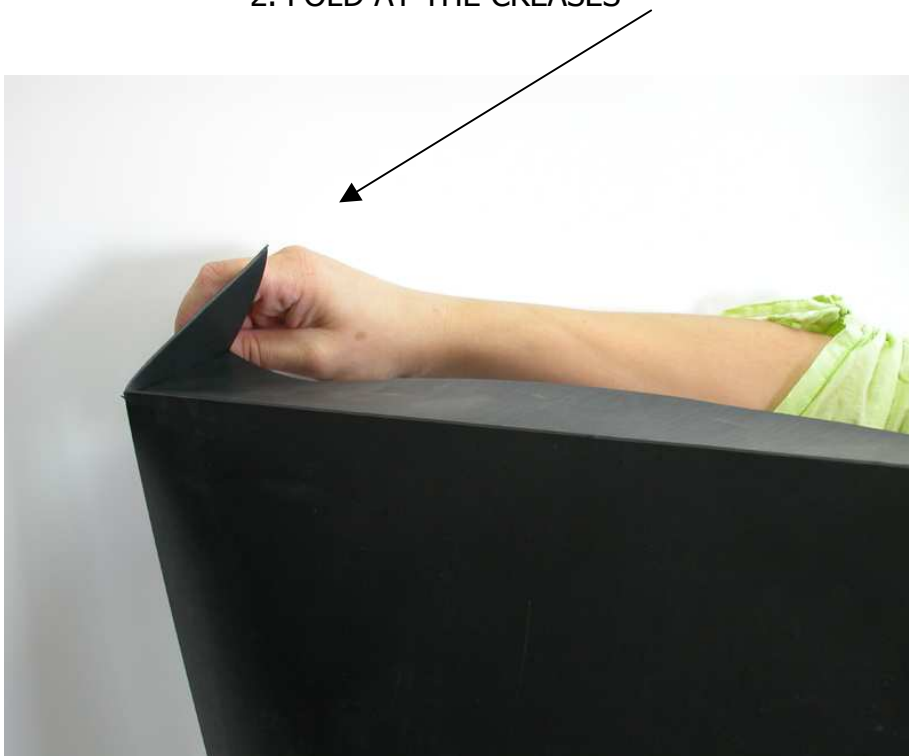

3. MAKE HOLES FOR RIVETS



4. PLACE RIVETS IN THE HOLES



5. FINISHED TROUGH ENDING WITH RIVETS

